

(Inclaves)

OF 2015 (Donghai Day Three) To our Honored

Made In China

Thank you for purchasing the top quality product. Please to check all packing material carefully for small parts which may be damaged by the carton during shipment. Count all parts and material hardware. Compare with your list to be sure all parts are present. If any parts are missing or damaged please, first, or mail to our Customer Service. If a return is necessary, please indicate the model number and date of purchase.

IMPORTANT NOTE: Please follow the proper sequence as shown in the diagram to ensure proper operation.


(Inclaves)



NOTE: Upon opening thoroughly clean all woods surfaces with furniture polish to remove dust and dirt that may have settled onto finish during shipment in order to protecting the product. Please assemble the product two persons at least


1.) Assemble the drawer

Through the holes of stick panel (H) to rotate the screws (V) into the front panel (F). Through the holes of side panel (G) to rotate the screws (V) into the inside back panel (HI), insert base panel (I) through the small slot of side panel (G) and the back panel (HI). Then through the holes of side panel (G) to rotate the screws (V) into the holes of front panel (F). At last through the middle holes of front panel (F) to rotate the screws (P) into the knob (O). (See the right picture)

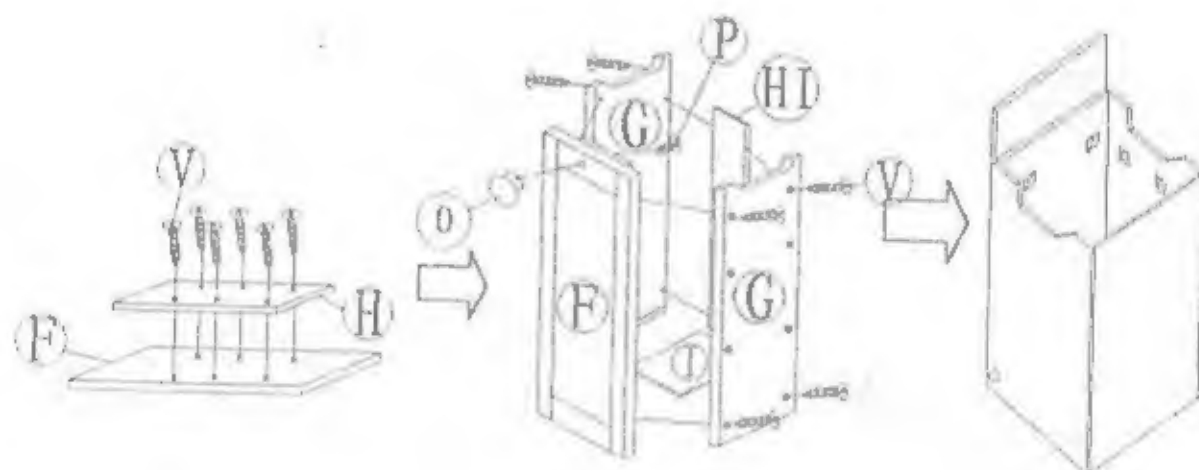


2.) Assemble the bottom panel (D)

Through the holes of feet (M) use the cam-tool (T) to rotate the screws (N) clockwise into the bottom panel (D). (See the below picture)

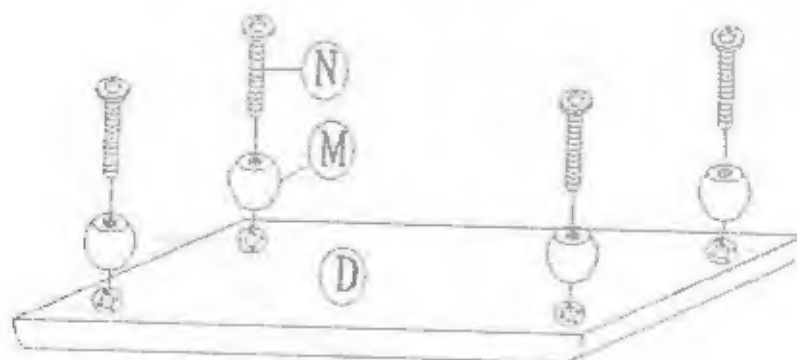


3.) Assemble stand panel (J)

Use the cam-tool (U) to rotate the cam-bolts (L) into the bottom panel (D). Use the cam-tool (U) to tighten cam-lock (K) clockwise into the large holes of stand panel (J). (See the right picture)


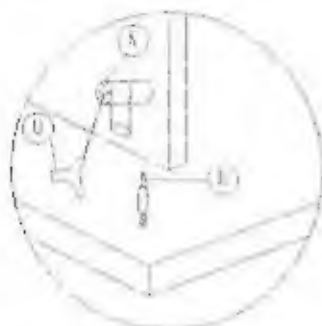


How to use CAM-TOOL

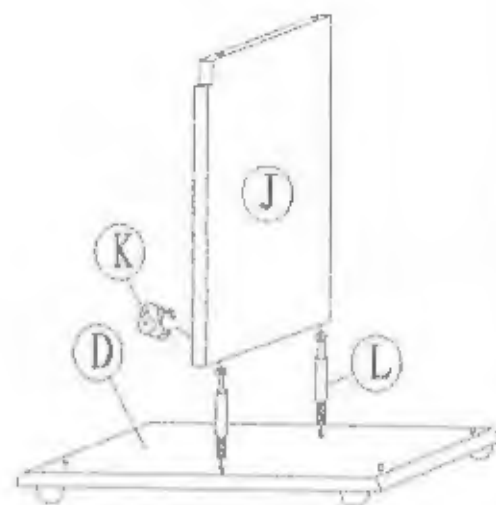

4.) Assemble left/right side panel (B/B1) and baffle(C)

Insert the dowel (Q) into the left/right panel (B/B1) and baffle (C). Use the cam-tool (U) to rotate the cam-bolts (L) into the bottom panel (D) and attach the left/right panel (B/B1). Then use cam-tool (U) to tighten cam-locks (K) clockwise into the left/right side panel (B/B1)..(See the left picture)

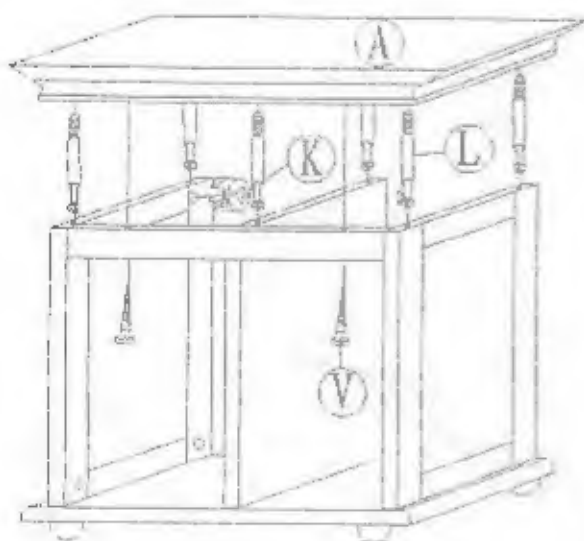
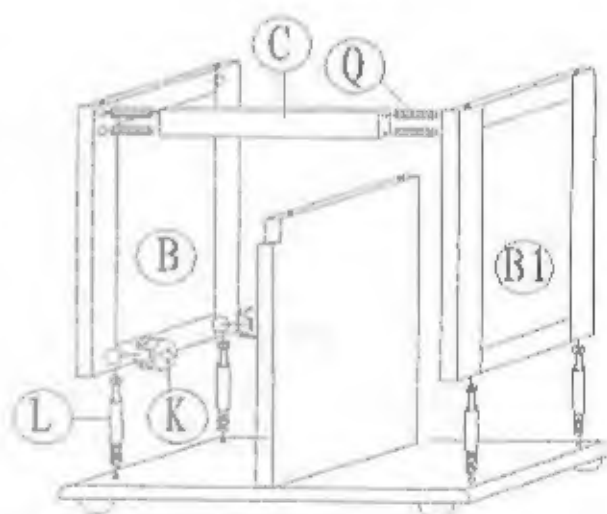


5.) - Assemble top panel (A)

Use the cam-tool (U) rotate the cam-bolts (L) into the top panel (A). Then use cam-tool (U) tightens the cam-lock (K) clockwise into the left/right/stand panel (B/B1/J). At last, through the holes of baffle (C) rotate the screws (V) into the top panel (A) (See the left picture).

6). Assembly the bucket.

Put the bag (W) into the bucket, Insert the hinge(R) into the inside side panel (G) and the stand panel (J) and the left/right side panel (B/B1) (See the right picture)

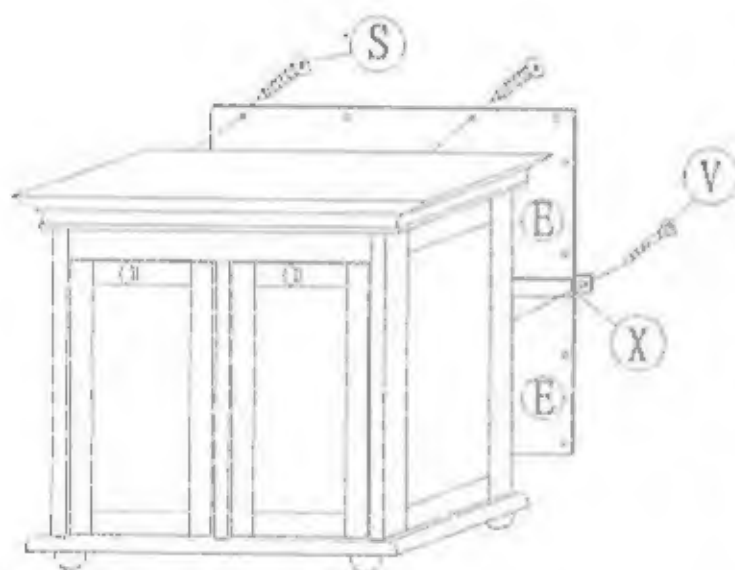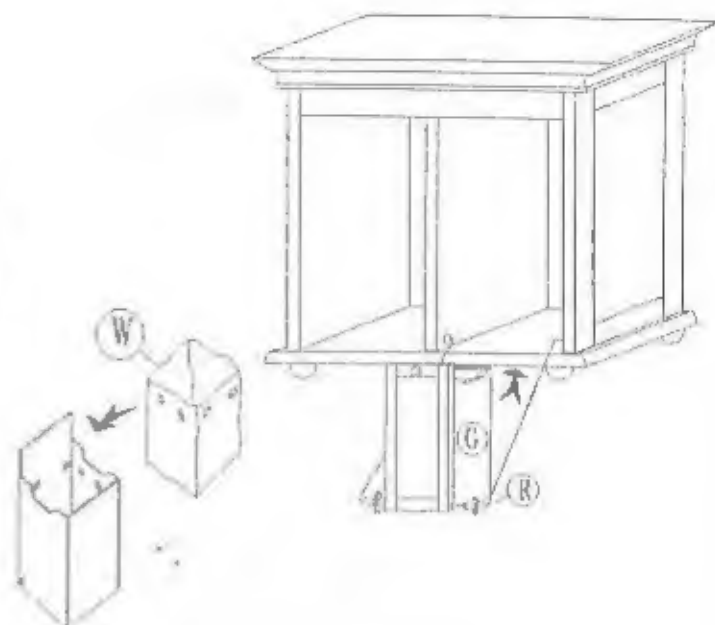

7). Assembly the back panel (E)

Thought the holes of back panel (E) to rotate the screws (S) into the top panel (A) and the side panel (B/B1) and the stand panel (J) and bottom panel (D), at the same time, through the adorn panel (X) to rotate the screws (V) into the left/right panel (B/B1). (See the left picture)

8). Ok Assembly complete. (See the below picture)

